 




USER MANUAL

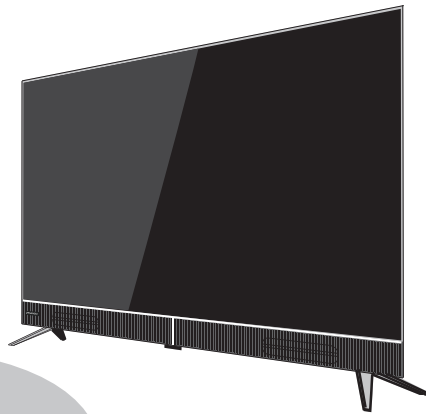

LED Smart TV

Model No.: **JSC32LSHD**

Please read this manual carefully for proper usage before installation and use. It is recommended to keep this manual properly for future check. The pictures in this manual are only for reference.

**WARNING:**

TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the products enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

REGULATORY INFORMATION

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the designated service center or customer care for help. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CAUTION

Do not attempt to modify this product in any way without written authorization from Sansui. Unauthorized modification could void the user's authority to operate this product. It is not recommended to keep a certain still image displayed on the screen for a long time as well as displaying extremely bright images on screen.

Figures and illustrations in this User Manual are provided for reference only and may differ from actual product appearance. Product design and specifications may be changed without notice.

WARNING

To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc. The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus. Attention should be drawn to the environmental

aspects of battery disposal. Don't throw used batteries in dustbin. Please contact your retailer in order to protect the environment. When you install your TV, maintain a distance of at least 4 inches between the TV and other objects (walls, cabinet sides, etc.) to ensure proper ventilation. Failing to maintain proper ventilation may result in a fire or a problem with the product caused by an increase in its internal temperature. No naked flame sources, such as lighted candles, should be placed on the apparatus. To prevent the spread of fire, keep candles or other open flames away from this product at all times. The device may malfunction when under electrostatic discharge. It can be manually resumed by power off and power on again. To avoid any injury caused by overturn of the product, please always ensure the whole product is placed within the table surface in horizontal.

CAUTION

While connecting the Power Cord, most appliances recommend to be placed upon a dedicated circuit, that is, a single outlet circuit which powers only that appliance and has no additional outlets or branch circuits. Do not overload wall outlets. Overloaded wall outlets, loose or damaged wall outlets, extension cords, frayed power cords, or damaged or cracked wire insulation are dangerous. Any of these conditions could result in electric shock or fire. Periodically examine the cord of your appliance, and if it's appearance indicates damage or deterioration, unplug it. Discontinue use of the appliance, and have the cord replaced with an exact replacement part by an authorized servicer. Protect the power cord from physical or mechanical abuse, such as being twisted, kinked, pinched, closed in a door, or walked upon. Pay particular attention to plugs, wall outlets, and the point where the cord exits the appliance. The MAINS plug is used as the disconnect device, and the disconnected device shall remain readily operable.

Operating Temperature: 5°C to 35°C

Operating Humidity: ≤80%

 
Storage Temperature: -15°C to 45°C

Storage Humidity: ≤90%


- ~ It Indicates alternating current.
- — It Indicates direct current.

IMPORTANT SAFETY INSTRUCTIONS


Read these instructions and heed all warnings. Follow all instructions carefully:

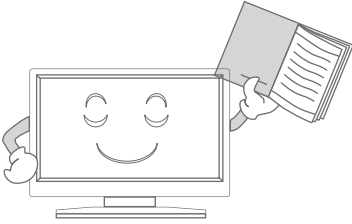

 1. Do not use this apparatus near water.

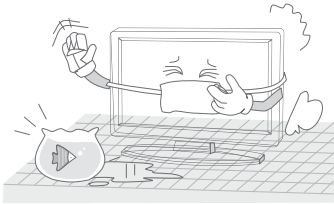

 
2. Clean only with a dry cloth.

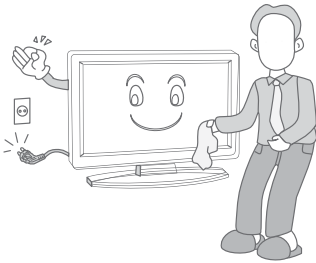

3. Do not block any of the ventilation openings. Install in accordance with the manufacturer's instructions.



 
4. Do not install near any heat source such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.

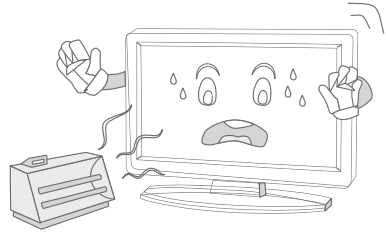


5. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.



 6. Only use the attachments/accessories specified by the Sansui.
7. Unplug this apparatus during lightning storms or when unused for long periods of time.

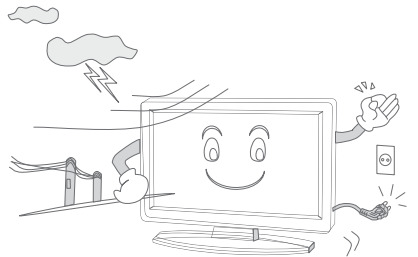

 8. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

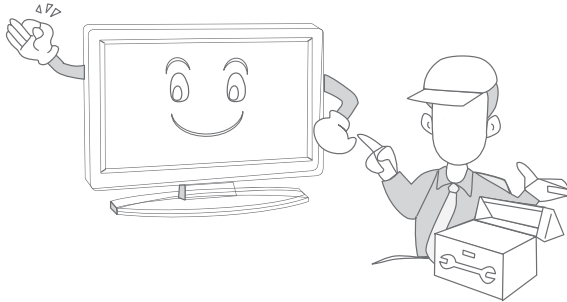

NOTE:





- Disposal of this product must be carried out in accordance to the regulations of your local authority. Do not dispose of this product with general household waste disposal.
- Some minute dot defects may be visible on the screen, appearing as tiny red, green, or blue spots. However this do not have adverse effects on the apparatus performance.
- Avoid touching the screen or holding your finger(s) against it for long periods of time. Doing so may produce some temporary distortion effect on the screen.
- It is not recommended to keep a certain still image displayed on the screen for a long time as well as displaying extremely bright images on screen, reduce the 'brightness' and 'contrast' when displaying still images

Front Panel

POWER/MENU Button:

- Long Press for power off.
- Short Press for power on / quick menu.
- Short press to select options, or switch the items.
- Long press to confirm and enter into the items.

Press the button to open the quick operation menu:

 
-  : Turn off the TV.
-  : Changes the channels.
-  : Adjust the volume level.
-  : Switch the input source items.



Remote Sensor
Power Indicator

NOTE: Keypad may change model to model.

BACK VIEW CONTROLS AND SOCKETS

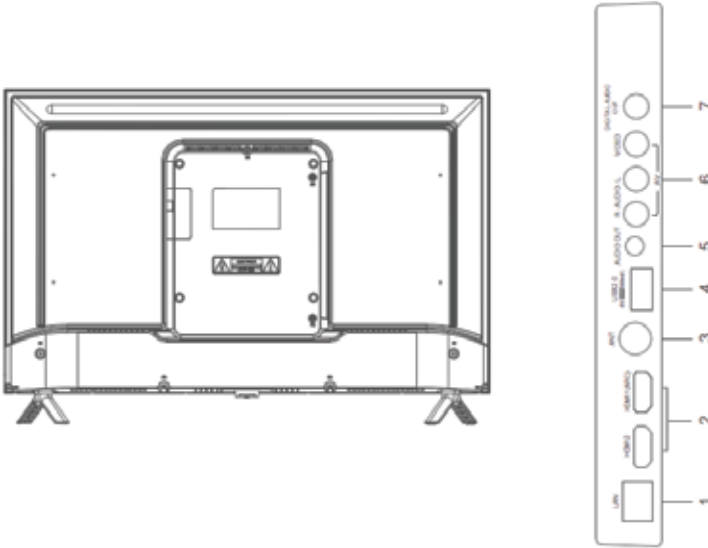

No.	Name	Description
1.	LAN	Local area network (LAN) port. Connect a LAN cable to this port to connect to the Network.
2.	HDMI	HDMI (High-Definition Multimedia Interface) input.
3.	ANT	Connection of the external antenna.
4.	USB 2.0	USB port. Connector a USB Storage device for multimedia file playback.
5.	AUDIO OUT	Audio output port.
6.	AV	Audio/Video signal input.
7.	DIGITAL AUDIO OUT	Connect to an external digital audio device.

NOTE: Input / Output connectivity options may change from model to model.

Cable Installation

Before the installation and use, please read carefully the relevant content in "Warning and Safety instructions". Take out the TV from the wrapping package and put it in a drafty and flat place.

NOTE:

- When you plug or unplug the power cable, you must make sure that the TV, computer or other equipment have been already shut down. When unplugging the power cable or signal cable, please hold the plug (the insulated part). Do not draw the body of the cable.
- **LAN:** Use a network cable to connect the interface and the broadband network interface.
- **HDMI:** (High-Definition Multimedia Interface) it provides an uncompressed digital connection that carries both video and audio data by way of an integrated mini-plug cable. While connecting the HDMI, make sure to avoid overexertion as the pin might break.
- **ANT:** Connect the antenna to TV via coaxial cable on ANT jack of the back panel.
- **AV:** The output AV terminal of DVD can be connected with the AV input port of the TV through AV cable. If AV works as mini terminal, please choose to use a one-to-three audio & video cable.
- **DIGITAL AUDIO OUT:** Sending the TV's digital audio signal to external audio equipment via the Digital Audio Output port.
- **AUDIO OUT:** Connect it to the audio Output terminal.
- **USB 2.0:** Connect a USB Storage device and multimedia file playback.

NOTE:

- The range of power input for the TV is 100-240V~ 50/60Hz. Do not connect the TV power input port with the power cable out of the specified range.
- Please hold the insulated part of the plug when you are unplugging the power cable. Do not touch directly the metallic part of the cable directly.
- Before connecting to an external device, please make sure that the TV is set and the external device have been turned off. When connecting, please make reference to the interface name and the interface color to connect the signal cable.
- The unit has a built-in wireless network card, and can directly receive network signals from wireless router through WIFI antenna.

 
Using The Remote Control

When using the remote control, aim it at remote sensor on the television. If there is an object between the remote control and the remote sensor on the unit, the unit may not operate.


- Point the remote control at the REMOTE SENSOR located on the television.
- When using this television in a very brightly lit area, the infrared REMOTE CONTROL SENSOR may not work properly.
- The recommended effective distance for using the remote control is about 7 metres.

Installing Batteries in the Remote Control


1. Open the cover at the back of the remote control.

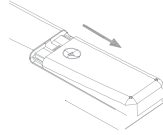

 2. Install two AAA size batteries. Make sure the remote control match the "+" and "-" ends of the batteries with the diagram inside the compartment.

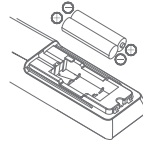

 3. Put back the cover.

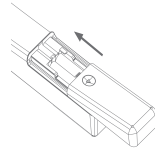**Battery Replacement**

You have to install the batteries into the remote control to make it operate by following the instructions below. When the batteries become weak, the operating distance of the remote control will be greatly reduced and then you have to replace the batteries.

 
Notes on Using Batteries:

The use of the wrong type of batteries may cause chemical leakage or explosion. Please note the following:


- Always ensure that the batteries are inserted with the + and - terminals in the correct direction as shown in the battery compartment.
- Different type of batteries have different characteristics. Do not mix different types.
- Do not mix old and new batteries. Mixing old and new batteries will shorten battery life and cause chemical leakage.
- Replace batteries as soon as they stop working.
- Chemicals which leak from batteries may cause skin irritation. If any chemical matter seeps out of the batteries, wipe it up immediately with a dry cloth.
- The batteries may have a shorter life expectancy due to storage conditions. Remove the batteries whenever you anticipate that the remote control will not be used for an extended period.
- The batteries (battery pack or batteries installed) should not be exposed to excessive heat such as sunshine, fire or the like.

CAUTION:

- It may result in an explosion if batteries are replaced incorrectly.
- Only replace batteries with the same or equivalent type.

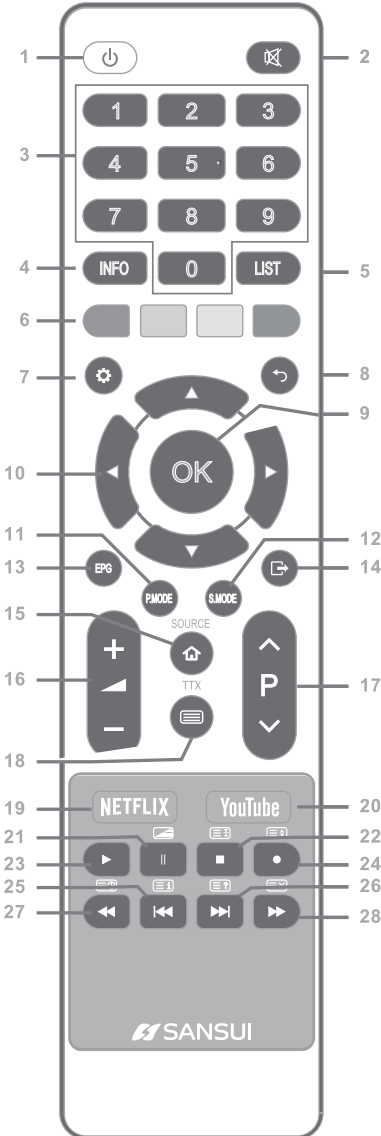

1. **Power** (⏻): Press to enter or exit the standby mode.
2. **Mute** (🔇): Press to mute or restore sound.
3. **NUMBER BUTTONS**: Choose channels or password importation.
4. **INFO**: display the current program information on the screen.
5. **LIST**: Press to call up the channel list. Press again to exit it.
6. **COLOR BUTTONS**: Red/ green/ yellow/ blue key navigation link. Use in accordance with the operation interface instructions.
7. **MENU** (⚙️): Press to enter the menu screen for various optional adjustable settings.
8. **Return** (↶): Return to the previous menu.
8. **Delete** (✖️): Delete button.
9. **OK**: Select the current item or enter into the function of the menu of the next level.
10. **Directional Buttons** (▲/▼/◀️/▶️): Press the direction buttons to select menu options or settings.
11. **P.MODE**: Press to change the picture mode.
12. **S.MODE**: Press to change the sound mode.
13. **EPG**: Electronic Program Guide, use in the DTV mode.
14. **EXIT** (🚪): Quit the current interface.
15. **SOURCE** (🏠): Select signal source, and accesses the main scene interface.
16. **+ / -**: Press to adjust the volume level up or down.
17. **▲ / ▼**: Press to select channels in ascending or descending order.
18. **Teletext** (☰): Enter the Teletext, and press this button again to exit.
19. **NETFLIX**: Goes to NETFLIX homepage.
20. **YouTube**: Goes to YouTube homepage.
21. **Home** (🏠): Press to return to the main interface.
22. **Back** (⏪): Press to return to the previous screen.
23. **Play/Pause** (⏸): Press to pause or resume playback.
24. **Stop** (⏹): Press to stop playback.
25. **Play/Pause** (⏸): Press to pause or resume playback.
26. **Next** (⏩): Press to skip to the next track or chapter.
27. **Fast Forward** (⏮): Press to fast forward playback.
28. **Fast Reverse** (⏭): Press to fast reverse playback.

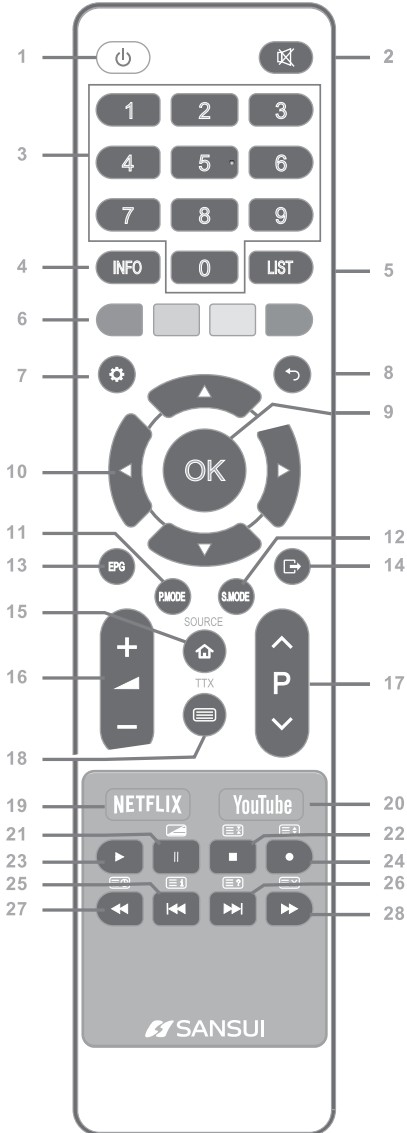 

- 20. **YouTube** : Goes to YouTube homepage.
- 21. **II**: Pause (in Media/PVR mode).
Press to start time shift function (in DTV mode).
- 22. **Teletext**: Press to enter the MIX mode in the teletext.
- 23. **■**: Stop the playback (in Media /PVR mode).
- 24. **Teletext**: Hold the teletext page on display, press again to release.
- 25. **▶**: Start playback (in media mode).
- 26. **●**: Press **●** button to start recording (In DTV mode).
- 27. **Teletext**: Change size of teletext screen in display mode.
- 28. **◀◀**: Skip to the beginning of the previous. (in media mode).
- 29. **Teletext**: Go to the index page.
- 30. **▶▶**: Skip to the beginning of the next. (in media mode).
- 31. **Teletext**: Reveal the hidden information of some teletext pages.
- 32. **◀◀**: Reverse playback rapidly. (in media mode).
- 33. **Teletext**: Enter subtitle mode or subpage.
- 34. **▶▶**: Advance playback rapidly. (in media mode).
- 35. **Teletext**: Cancel the teletext but not to exit teletext, press again to show teletext.

NOTE:

- The colour and shape may vary depending on the model.
- The buttons not mentioned here are not used.

Turning on and off**• Turn on the TV**

Plug the power cord into a suitable power point. Then press the POWER (⏻) button, on the lower side of the back panel (or on the remote control, making sure to aim it at the remote sensor located on the front of the TV).

• Turn off the TV

Press the button on the remote control to enter standby mode. To power down the TV completely, unplug the power cord from the mains socket. Do not leave your set on standby mode for long periods of time. If you do not use the TV for a long time, it is recommended to unplug the set from the mains and aerial.

First Time Setup

If this is the first time you run the TV, the Initial Setup Menu will appear in the picture, and the items of this menu also exist in other menus, so you are able to change the values after you set them up.

Tips: Make sure that the antenna or cable TV system connection is made.

• Set your desired language

Press the ▲/▼ buttons to select the Menu Language, and then press the **OK** button. Press the ► button to go to the next step.

• End-User License Agreement

Select Accept and then press the ► button to accept the EULA and go to the next step. Select **view additional details** and then press the **OK** button to read a detailed EULA. Press the ◀ button to go to previous step.

• Select your country

Press the ▲/▼ buttons to select the country you are living in, and then press the **OK** button. Press the ► button to go to the next step. Press the ◀ button to go to previous step.

• Select your time zone

Press the ▲/▼ buttons to select a time zone, and then press the **OK** button. Press the ► button to go to the next step. Press the ◀ button to go to previous step.

• Select your TV environment.

Press the ▲/▼ buttons to select the Home Mode or Store Mode and then press the **OK** button.

- **Home** is the recommended setting to produce the best energy efficiency. If you want to set Store Mode, a message appears asking you to confirm your choice. Press the ► button to go to the next step. Press the ◀ button to go to previous step.

• Network connection (Wired or WiFi)

Press the ▲/▼ buttons to select "Wired" or "Wifi", and wired or wireless network is enabled respectively. (For more details on connection, please refer to the "Network settings".) Select "Skip" and press **OK** to cancel the network setup and move to next step.

■ Select the input source

Press the ▲/▼ buttons to select the input source, and press the **OK** button to confirm your choice.

NOTE:

- If the TV doesn't receive any channels, please check your aerial connection or the country you have selected, and then try an auto search again.
- If the TV just receives some of the channels, it means the aerial's reception isn't good enough and an antenna service is recommended.

Programme Selection

■ Using the ▲P▼ on the remote control.

Press P▲ to increase channel number.

Press P▼ to decrease channel number.




■ Using 0-9 Digital Buttons.

You can select the channel number by pressing 0 to 9. Example:


To select (-) channel (e.g. Channel 5): Press 5.

To select (--) channel (e.g. Channel 20): Press 2 and 0 in a short time.

Volume Adjustment

- Press the +  - on the remote control to adjust the volume.
- If you want to switch the sound OFF, press the .
- You can release mute by pressing the  or increase the volume.

Changing the Input Source

1. You can select the input source by pressing the **SOURCE** () button on the remote control.
2. Press the arrow button to cycle through the input source, and press the **OK** button to confirm your choice.

How to Navigate Menus

Before using the TV follow the steps below to learn how to navigate the menu in order to select and adjust different functions. The access step may differ depending on the selected menu.

1. Press the **MENU** (⚙️) button to display the main menu.
2. Press the **▲/▼** button to select the desired sub item.
3. Press the **OK** or **▶** button to access the menu of the next level.
4. Press the **BACK** (⏪) button to return to the previous menu.
5. Press the **EXIT** (⏻) button to exit from the menu.

NOTE:

- When an item in MENU is displayed grey it means that the item is not available or cannot be adjusted.
- Buttons on the TV have the same function as corresponding buttons on the remote control. If your remote control is lost or couldn't work, you may use the buttons on the TV to select menus. This manual focuses on operation of the remote control.
- Some items in the menus may be hidden depending on modes or signal sources used.
- TV's OSD (On Screen Display) may differ slightly from that shown in this manual.

Configuring the Channel Menu

- **Auto tuning:** Press the OK button to enter sub-menu.
 - Tune Type: Press the **▲/▼** button to select tune type: DTV+ATV, DTV, ATV.
 - Country: Press the **▲/▼** button to select country.
 - Scan Mode: Press the **▲/▼** button to select the scan mode.
 - Service Type: Select the service type to search.
 - LCN: Select a country with LCN. Press the **▲/▼** button to select On or Off .Select no LCN on a country which is displayed in grey.
 - Start: Press the **▶** button to enter start,press the ok button to start the auto searching.

Once the progress bar is full, the found channels will be stored and the unit will proceed to start the search for DTV, ATV, Radio and Data.

- **DTV Manual Tuning:** Manual store for digital channels.
 1. Press the **◀/▶** button to select channel, Scan Mode and Service Type.
 2. Press the Select button to start channel tuning. When a channel is found, the searching process will stop and the channel will be saved with current channel number. Press the **EXIT** (⏻) button to exit.
- **ATV Manual Tuning:** Manual store for ATV channels.
 1. Press the **▲/▼** button to select items.
 2. Press the **◀/▶** button to adjust it.
 3. When setting is completed, Press the **▼** button to select "SAVE" to save it.
- **Dynamic Rescan:** Switch the Dynamic Rescan function On or Off if required.
- **Programme Edit**

Press the **▲/▼** buttons select the Programme Edit, then press the OK button to enter sub menu.

1. Press the **▲/▼** button to select a channel.
2. Press the **◀/▶** button to select the following or preceding page.
3. **Delete:** Press the **RED** button to delete the channel.

Favorite: Press the Green button to set the favorite channel.

Move: Press the YELLOW button to set the channel to moving state, and then press the **▲/▼** buttons to move it to the position you want to put.

Skip: Press the BLUE button to skip the channel. (Your TV set will skip the channel automatically when using ◀/▶ to view the channels.)

Configuring the Picture Menu

- **Picture Mode:** You can select the type of picture which best corresponds to your viewing requirements. Contrast, Brightness, Colour, Sharpness, Tint (NTSC) and Backlight can be adjusted when the picture mode is set to User.
 - **Contrast:** Adjust the white level of the picture.
 - **Brightness:** Adjust darkness of black sections in the picture.
 - **Colour:** Adjust the color intensity of the picture.
 - **Sharpness:** Object edges are enhanced for picture detail.
 - **Tint:** Adjust the hue of the picture. (Valid only for NTSC signals).
 - **Backlight:** To control the brightness of the screen, adjust the brightness of panel.
- **Aspect Ratio:** You can select the picture size which best corresponds to your viewing requirements.
- **Advance Settings:** Use the ▲/▼ button to select Expert Settings, and then press OK button to access the submenu page.
- **Color Temperature:** Select the color temperature of the picture.
- **SDR to HDR:** Conversion SDR to HDR.
- **HDR: (High Dynamic Range)** Generally used in video format, HDMI and the USB provides a greater dynamic range and greater image detail, also allows better recovery actual scene and visual effects.
- **NR: (Noise Reduction)** Reduces screen noise without compromising video quality.
- **MPEG NR:** Reduces MPEG noise to provide improved picture quality.
- **Dynamic Contrast:** Adjusts the contrast to the optimal level according to the image's brightness.
- **Film Mode:** Sets the TV so that it senses and then processes film signals from all sources automatically and adjusts the picture for optimum quality.
- **PC Mode** (In HDMI mode): When it is set to "On", the TV set is more suitable to be used as a monitor (valid only in the VESA mode of the HDMI channel).
- **Over Scan** (In DTV, HDMI mode): The picture reproduction rate is adjusted.
- **Picture Reset :** Reset all picture settings to the factory defaults.

Configuring the Sound Menu

 
- **Sound Mode:** You can select a sound mode to suit your personal preferences. When the sound mode is set to User:
 - **Equalizer (Seven-stage equalization setting):** Press the ▲/▼ buttons to select: 120 Hz, 300 Hz, 500 Hz, 1 kHz, 3 kHz, 6 kHz or 12 kHz, and then press the ◀/▶ buttons to adjust the frequency equalization of the sound.
 - **Surround Sound:** Press ▲/▼ buttons to select Surround Sound, you can select Off, Low, Middle, and High.
 - **Dialog Enhancer:** Press ▲/▼ buttons to select Dialog Enhancer, you can select Off, Low, Middle, and High. The dialogue enhancer feature allows you to clearly hear the dialogue voice of the TV broadcast, thus avoiding the background sound effects being too loud and the dialogue voice being too small.
 - **AVC (Auto Volume Control):** Press ▲/▼ buttons to select Auto Volume Control, you can select Off, Low, Middle, and High.
- **Balance:** You can adjust the sound balance of the speakers to preferred levels.
- **S/PDIF Mode:** Press ▲/▼ buttons to select S/PDIF Type. You can select "PCM" or "Auto". S/PDIF (Sony Philips Digital Interface) provides digital audio output to speakers and various digital devices such as A/V Receivers and Home Theaters which reduces interference and distortion.

- **AD Switch** (In DTV mode) *this is only available in some countries, mainly in North America and Europe. This is an auxiliary audio function that provides an additional audio track for visually challenged persons. This function handles the Audio Stream for the AD (Audio Description), when it is sent along with the Main audio from the broadcaster. Users can turn the Audio Description On or Off and control the volume.
- **AD Volume:** When the AD Switch is set On, the AD Volume can be adjusted.
- **Audio Delay:** Press the ▲/▼ buttons to select the Audio Delay, then press the OK button to enter sub menu. You can select " S/PDIF Delay" or " Speaker Delay". Correct audio-video sync problems, when watching DTV and when listening to digital audio output using an external device such as an audio receiver (0ms~250ms).
- **Sound Reset :** Reset all sound settings to the factory defaults.


Network Function Operation Instruction

You can set up your TV so that it can access the Internet through your local area network (LAN) using a wired or wireless connection.


- Connecting to a Wired Network
- You can attach your TV to your LAN using cable in three ways:
You can attach your TV to your LAN by connecting the LAN port on the back of your TV to an external modem using a Cat 5 cable. See the diagram below.

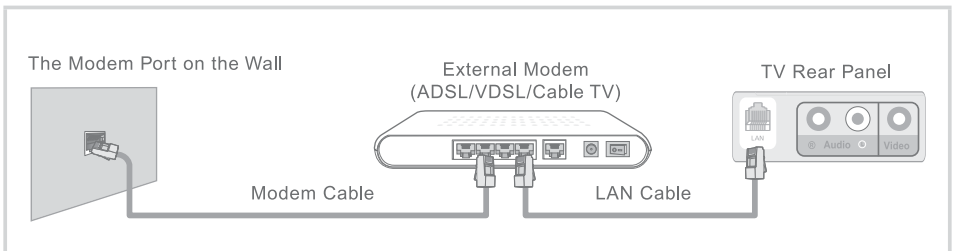

 - You can attach your TV to your LAN by connecting the LAN port on the back of your TV to an IP Sharer which is connected to an external modem. Use Cat 5 cable for the connection. See the diagram below.

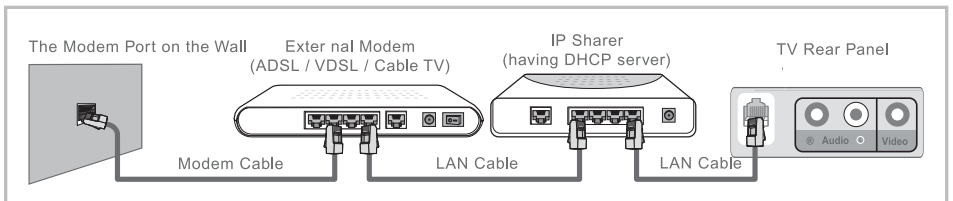

 - Depending on how your network is configured, you may be able to attach your TV to your LAN by connecting the LAN by port on the back of your TV directly to a network wall outlet using a Cat 5 cable. See the diagram below. Note that the wall outlet is attached to a modem or router elsewhere in your house.

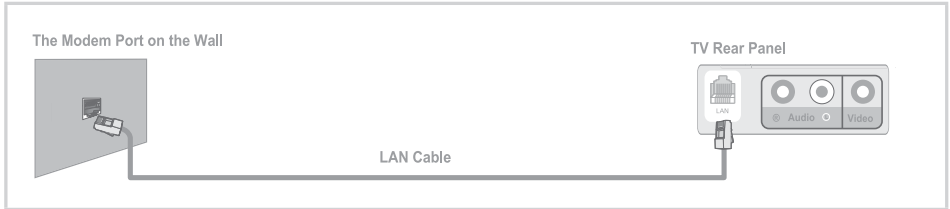

If you have a Dynamic Network, you should use an ADSL modem or router that supports Dynamic Host Configuration Protocol (DHCP). Modems and routers that support DHCP automatically provide the IP address, subnet mask, gateway, and DNS values your TV needs to access the Internet so you don't have to enter them manually. Most home networks are Dynamic Networks. Some networks require a Static IP address. If your network requires a Static IP address, you must enter the IP address, subnet mask, gateway, and DNS values manually on your TV's Cable Setup Screen when you set up the network connection. To get the IP address, subnet mask, gateway and DNS values, contact your Internet Service Provider (ISP). If you have a Windows computer, you can also get these values through your computer.

Wired Network Setup

- **How to set up automatically (Wired)**

Use the Automatic Network Setup when connecting your TV to a network that supports DHCP.

1. Connect your TV to your LAN as described in the previous section.
2. Turn on your TV, press the **MENU** (⌘) button on your remote, use the **▲/▼** buttons to select **Network**.
3. Press the **OK** or **▶** button to enter. Then press the **▲/▼** button to select **Wired**.
4. Select **IPv4** or **IPv6**. Then press the **OK** button to enter the menu of the next level.
5. Auto acquires and enters the needed Internet values automatically.
6. Select the **Connect** and press **OK** to connect the internet.
7. If the Network Function has not acquired the network connection values, please manually input configuration information.

- **How to set up manually (Wired)**

Use the Manual Network Setup when connecting your TV to a network that requires a Static IP address.

1. Follow Steps 1 through 4 in the “**How to set up automatically**” procedure.
2. Set Network Config. to **Manual**.
3. Press the **▲/▼** button to highlight the field you want to change, and then use the number buttons to input the network parameters, such as **IP Address**, **Subnet Mask**, **Gateway** and **DNS**. Press **BACK** (⏪) key to return.
4. When done, select the **Connect** and press **OK** to connect the internet.

NOTE:

 
If you manually set the IP address, you must not use the same IP address for any other device. The IP address you use should be a private address.

Tips for Network Connection:

- Use a standard LAN cable with this TV. Cat 5 or better with a RJ45 connector.
- Many network connection problems during set up can often be fixed by re-setting the router or modem. After connecting the player to the home network, quickly power off and/or disconnect the power cable of the home network router or cable modem. Then power on and/or connect the power cable again.

■ Connecting to a Wireless Network

You can connect your TV to your LAN through a standard wireless router or modem.

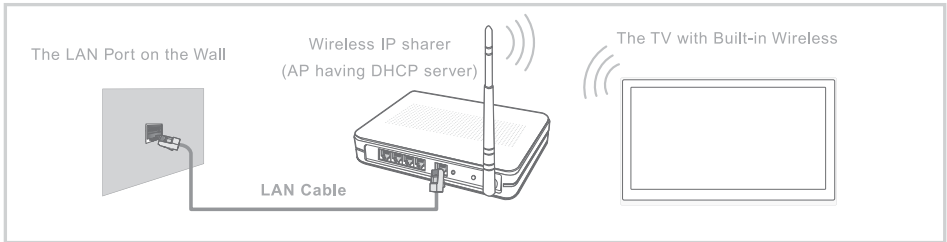

Wireless Network Configuration

Most wireless network systems incorporate a security system that requires devices that access the network through an access point or wireless router (typically a wireless IP Sharer) to transmit an encrypted security code called an access key.

Wireless Network Setup

• How to set up Wifi

1. Turn on your TV, press the **MENU** (⚙️) button on your remote, use the ▲/▼ buttons to select **Network**, and then press the OK or ► button to enter Connection Type.
2. Press the ▲/▼ button to select Wifi. Then press the **OK** button to enter the menu of the next level.
3. The Network function searches for available wireless networks. When done, it displays a list of the available networks. In the list of networks, press the ▲/▼ button to select a network, and then press the **OK** button.
4. On the Please Enter screen, enter your network's Password. To enter the Password, follow these general directions:

- Press the **OK** button to display the keyboard at the screen.
- Use the direction buttons to select the **▣** and press **OK** to cycles through lower case, upper case.
- Use the direction buttons to select a letter, special symbols or number, move to the letter, special symbols or number, and then press the OK button.

To delete the last letter or number you entered, Use the direction buttons to select **⏪** and press OK. Press EXIT (**⏏**) to close the keyboard.

5. Input the correct Password and select the **Connect** and press the **OK** button to connect the network.
- **Add:** You can also add a WiFi network manually by selecting Add others. Press ▲/▼ buttons to select Add, then press OK button, follow the displayed messages below the menu to input the network name, encryption mode and network password, and then press▲/▼ buttons to select "Connect", the system starts to search wireless routing and connect. When the network is connected, the current wireless network will be added into the list of wireless networks.
 - **WOW:** Switch the WOW on or off.
 - **IP Settings:**The IP address, netmask, gateway and DNS values static are allowed to be set manually when it is set to "Manual".
 - **If Your TV Fails to Connect to the Internet:**
 - Your TV may not be able to connect to the Internet because your ISP has permanently registered the MAC address (a unique identifying number) of your PC or modem, which it then authenticates each time you

connect to the Internet as a way of preventing unauthorized access. As your TV has a different MAC address, your ISP can not authenticate its MAC address, and your TV can not connect.

- To resolve this problem, ask your ISP about the procedures required to connect devices other than a PC (such as your TV) to the Internet.
- If your internet service provider requires an ID or password to connect to the Internet, your TV may not be able to connect to the internet.
- The internet connection may fail because of a firewall problem. If this is the case, contact your Internet service provider.

Configuring the System Menu

- **Language:** Select your preferred on screen display language.
- **Subtitle:** Switch the subtitle function on or off.
- **Subtitle Hearing Impaired:** When hearing impaired is on, the TV screen will give some information to the people whose hearing are impaired when Hearing Impaired is the information will be hidden.
- **Audio Languages:** Select your preferred audio language. (Available for digital channels if multiple audio languages are broadcasted.)
- **Subtitle Languages:** Select your preferred subtitle Language. (Available for digital channels if multiple subtitle languages are broadcasted.)
- **HBBTV:** Switch the HBBTV function On or Off.

NOTE:

- This service may be supported in other countries.
- Some broadcasting may not support the HBBTV.
- An application on HBBTV may malfunction temporarily depending on the circumstances of the broadcast station or application provider.
- An application is only available for use on HBBTV when the TV network is connected to an external network. The application may malfunction depending on the network conditions.
- **Country:** Display the current country.
- **HDMI CEC:** Press the OK / ► button to enter the submenu. The HDMI CEC system can be used only with devices that have the HDMI CEC feature. You must connect an HDMI CEC device using an HDMI cable. Some HDMI cables may not support HDMI CEC functions.
 - **HDMI CEC:** Switch the HDMI CEC function On or Off.
 - **Auto Standby:** When this set to On, turning off the TV will turn off the connected device as well.
 - **ARC:** Switch the ARC function On or Off.
 - **Auto Power On:** When this set to On, turning on the TV will turn on the connected device as well.
- **HDMI EDID (in HDMI mode):** Switch EDID Version, Select EDID Standard, Enhanced or Auto, when source signal is transferred by HDMI Standard, Enhanced or Auto specification. (Switching between different formats of signals, the time to detect the signal may be longer, please be patient otherwise please switch to the corresponding EDID mode)
- **Bluetooth:** Switch the Bluetooth function ON or OFF.
- **Environment:** You can select Home or Store for the TV environment. It is recommended to set the TV to Home Mode.
- **Restore Factory Default:** Restore the system settings to the factory default. When the restore is complete, the TV will enter standby mode.

- **PVR File System (In DTV mode):**

PVR Function Operation Instruction

- **Preparing**

1. Plug USB flash drive or USB hard disk into USB slot on the TV set.

NOTE:

- USB disk should have capacity at least 512MB.
 - USB device must support USB 2.0 high-speed specification.
 - Use only USB storage devices formatted with FAT32.
2. Select a digital channel, the PVR function can only be used in DTV mode.
 3. Then press **MENU** (⚙️) button on the remote to bring the main menu up, press arrows button to highlight Option menu, and then press the OK button.
 4. Press **▲/▼** buttons to highlight **PVR File System (In DTV mode)**, then press OK button to go into submenu.

- **Setting**

Select Disk: Select a disk used for PVR.

NOTE:

- Some models have two USB input and several disk can be used when two USB devices are plugged in.
- **Format Start:** Format USB disk.

NOTE:

- Before formatting, please back up all important files.
- During the device formatting, do not disconnect the device or turn off the power. If your USB device can't be formatted or fail to be checked by the system, it means the device isn't compatible with the TV or is damaged. The larger USB device will take longer time to format, please be patient until the formatting finishes.
 - **Speed Check:** Press OK to check the speed of the storage device.
 - **Record List:** Shown the list of recorded programs.
 - **Time Shift Size:** You can select the memory size for Time Shift function.

- **Recording**

There are two types of recording: Instant Recording and Schedule Recording.

Instant Recording can record the current TV programmes, while Schedule Recording can start at a specified time and record the TV programmes automatically on the day, time and duration you choose.

- **Instant Recording**

1. Select the channel you want, then press (RECORD) button on the remote control to start recording. A menu will come up on the screen when TV start recording.
2. Press ● (RECORD) button to minimize the information bar at the bottom of the screen. Press ● (RECORD) button again to display information about the current recording.
3. Press the ■ (STOP) button to display a dialogue box: select "Yes" to stop recording, select "No" to dismiss the dialogue box.

Tips: You cannot change to a channel from another broadcaster or select another function while in recording mode.

- **Schedule Recording**

The unit is able to do schedule recording when TV is turned on or in standby mode.

1. Press EPG button to bring up Programme Guide menu.
2. Then press red button will active timer for recording submenu. You can set up time and record mode in the menu.
3. Press **▲/▼** button to highlight different setting and press **◀/▶** button to change setting. After you have finished adjusting settings to desired options, press the OK button to save the scheduled recording.

NOTE:

1. You can set up several schedule programmes to record. To do this you will need to press the yellow button in the EPG mode which will show you the entire list. Different schedules should not overlap and there must be at least a 1 minute time gap to set up between two schedules.
 2. When recording starts in standby mode, the front indicators will change color and there will be no picture or sound from the unit. You can press button to turn on the screen.
- **Playing the Recorded Programmes**

Option 1:

After recording has finished, press the MENU (⚙️) button on the remote to enter the main menu, press arrows button to highlight System menu and press the OK/▶️ button; then press ▲/▼ buttons to select PVR File System (In DTV mode), then press the OK button to go into submenu.

1. Press the ▲/▼ buttons to select the Record list.
2. Use the ▲/▼ buttons to select a recorded file and press OK to start playback in full screen mode.
3. Press the RED button to delete the file you no longer require.
4. Press the MENU (⚙️) button to return to the previous menu.

Option 2:

Also you can play the recorded programmes in **Media** mode.

1. Press (🏠) button to enter the Smart Home interface.
2. Use the ▲/▼ buttons to select Media, and then press **OK**.
3. Use the arrow buttons and OK button to enter the desired disk.
4. Use the arrow buttons and OK button to open the folder (_MSTPVR).
5. Press the **MENU** (⚙️) button to display the setting menu.
6. Press the ■ button to stop the playing file.
7. Press the **EXIT** (🏠) button to return to the USB main menu.

- **Time Shift Function**

This function allows the TV to automatically record live TV and make it available for viewing at any time. With the Time shift turned on, you may rewind normal TV viewing at any time without missing any of the live broadcast. Press the II button on the remote control to activate Time Shift function. The TV stores the channel from the point of view you want to record. If an USB device dedicated to recording is disconnected, Time Shift files that were saved will automatically be deleted.

NOTE:

When using the PVR/Media function, remember the following important points:

- You should use a USB disk with at least 4GB capacity.
- The connected USB device must support 2.0 speeds.
- We strongly recommend you to take back up of all data in the another USB storage device, so you do not risk losing any data in case of an unexpected device failure or accident. We do not accept liability for any loss of data due to misuse or malfunction. Data backup is your personal responsibility.
- You cannot change to a channel from another broadcaster or select another function while in recording mode.
- If the signal is interrupted or removed while in recording mode, the recording will stop until the signal is established. This may cause you to lose programme content.
- Do not turn the TV off during recording, otherwise the TV will exit the time-shift function and turn to standby mode.
- Some USB storage devices may not be compatible for smooth operation with this TV.

- For large file sizes and large capacity storage devices, the loading speed may be longer. The recognition speed of a USB storage device may vary depending on the device.
- When connecting or disconnecting the USB storage device, ensure the TV is not in USB mode, otherwise the USB device or the files stored in it may be damaged.

Configuring the Lock Menu

- **Lock System:** The feature can prevent unauthorized operating the TV set, unless entering 4-digit password. Press 0-0-0-0 using Direct Channel Selection Buttons (0-9). (This is default password.)

NOTE:

- If you forget your password, use the factory password 1-2-2-5, access to change your password if necessary.
- **Set Password:** Press the OK button to enter sub menu. You can set your private password. Press the number buttons on the remote control to set the new password. When the new password has been input twice, the setting is finished successfully. The TV will go back to previous menu.
- **Block Programme (In ATV/DTV mode):** Press ▲/▼ buttons to select which program blocked then press Yellow to set block. Press the Yellow button again to unblock it. (Only available when Lock System set to on)
- **Parent Guidance (In DTV mode):** Press the ▲/▼ buttons to select age rating. This feature can prevent children watching adult's TV program, according to the rating limit set.

Configuring the Timer Menu

- **Auto Sync:** If set it to ON, the TV will sync the local clock according to the DTV broadcasting time automatically.
- **Time Zone:** Display your time zone.
- **Clock:** Display either the DTV signal stream time or set the time manually.
- **Sleep Timer:** Sleep Timer switches the TV to standby after a defined period of time. To cancel the Sleep Timer, set to "Off".
- **Auto Sleep:** Select the Auto Sleep time you want. The TV will enter into standby mode automatically when there is no operation in set time.
- **No Signal Power Off:** When set to "On", if there's no TV signal nor press-button operation, TV will enter standby status automatically about 5 minutes later.

NOTE:

When the "Auto Sync" is set to "On", clock option become grey and can't be adjusted.

Configuring the Support Menu

- **Software Update (USB):** Update the software by using the USB memory device. Do not disconnect the power or remove the USB drive until updates are complete.
- **Internet Update check:** To use network upgrade, configure your TV to connect to your network and the TV must be connected to the Internet.
- **NetReady Version:** Display current software version information.
- **Installation Guide:** This is an installation guide to help you to setup the TV.
- **View End-User License Agreement:** Read and accept/decline the EULA.
- **App Settings:** Display information about the Netflix.

Programme Guide (In DTV Mode)

Press EPG button to display the Programme Guide menu. This function let you know the detailed information of the channel, indicating the time of the program playing. From the Programme Guide it is possible to check the programme information for the next eight days (If the information is available from the broadcaster). Press EXIT (EXIT) button to exit.

Record

Press red button to set the parameters for recording. The unit is able to do schedule recording when TV is turning on or in standby mode. You can set up several schedule recording. Different schedules should not overlap. When recording starts in standby mode, the front indicators will change color and there will be no picture or sound from the unit.

Time: Press the green button to switch the display mode.

Schedule: Press the yellow button to display the schedule list.

Reminder: If you find the desired program which will be shown in the future. Press the blue button to book program. Press button to page up or down the list.

Channel list

Press LIST button to display the Channel List.

Press the ▲/▼ buttons to select the channel and press **OK** to watch it.

Press the Green button to enter the favorite list.

Press the Blue button to enter Programme Edit.

Press the Yellow button to search channel.

Press ◀/▶ button to page up or down the list.

Press **EXIT** (EXIT)/LIST button to exit.

Press the **MENU** (MENU) key to enter setting menu.

MENU



Press MENU (MENU) button on the remote control to display the menu.

Press ▲/▼ to select the items, and press the OK/▶ button, then press ▲/▼ buttons to adjust.

(Options: Picture Mode, Sound Mode, TV Radio, Aspect Ratio, Subtitle Languages, Sports Mode etc.)

Press MENU (MENU) button to exit.

Smart Home Operation Introduction

Home is an entry interface for all the other functions, which could enter from this interface layer by layer. Via using home menu function, different needs of user could be met, making them fully enjoy video and audio effects brought by the machine. Press SOURCE () button to open home interface. Press arrow buttons to cyclically select all options. Press OK button to enter a small window for selection. Press EXIT () button to exit home interface.

Media Playback

The media function of this unit enables you to read movable USB storage devices such as USB drive, USB mobile hard disk, and USB card reader, and you can also browse files, play pictures, play videos, and play music in the corresponding files in the above devices.

NOTE:

- Special USB device may be not or well supported.
- USB max. load: DC5V/500mA.
- The formats supported

The media function can support the USB device with USB memory.


It can play PHOTO, MUSIC and VIDEO files.

Photo Format Support: JPEG, BMP, PNG.

Music Format Support: MP3, AAC, M4A.

 

Video Format Support: VOB, DAT, MPEG -1/MPEG-2/MPEG-4, TS/T.P.

Enter/Exit the media

1. First, insert a USB memory device into the USB port.
2. Press the arrow buttons to select Media, and then press **OK** button to access the Media mode.
3. Press arrow buttons to cyclically select Files, Music, Photo, Video and Record.
4. Press the EXIT () button to exit.

Main Operating Interface

• Basic operation



1. Press **▲/▼** buttons to cyclically select Files, Music, Photo, Video and Record in the USB main menu.
2. Use the arrow buttons to highlight the folder, and then press the **OK** button.
3. Use the arrow buttons to highlight the Music /Photo/ Video. Press **OK** button to play the selected Music or Photo or Video.
4. Press the BACK () button to return to previous menu screen.
5. Press the EXIT () button to return to the USB main menu.

• Play Files

1. When entering the main interface of the media, press the **▲/▼** key to select the file types, and press the down key or the **OK** key to enter the content selection interface of such types of files.
2. When one file is selected, press the **OK** key to play.

• Music Play

  When entering "Media"→"Music", follow the above operation mode to start playing music files.

1. Press the up/down key to select the music in the list repeatedly, and press the up key to enter the music player console, press the down key to close the console.
2. Press the **OK** key to pause or continue to play music.
3. Press the **MENU** () key to recall "Music setting" menu. Press the BACK () key to return to the status before music play.

- **Music Play Setting Menu**

When the **MENU** (⚙️) key is pressed to enter the “Music setting” menu, the remaining operations are similar to those of the video play setting menu.

1. **Sound mode:** Select the different sound effect.
2. **Balance:** Adjust the sound balance of the speakers to preferred levels.

- **Music Play Console**

Press the up key to enter the music player console, press the up/down key to select the control button repeatedly, and press the OK key to perform the functions of the selected key. To close the play console, please press the **BACK** (⏪) key.

1. **Stop:** To stop playing music.
2. **Setting:** To enter the music play setting menu.
3. **Info:** Music information.
4. **LRC:** To switch between the lyrics synchronization and play list.
5. **Play Mode:** Select the different play mode.
6. **Audio only:** Turn off the screen only play sound.

- **Photo Play**

When entering “Media”→“Photo”, follow the above operation mode to start playing picture files.

1. Press the up /down key to select the photo in the list repeatedly, and press the up key to enter the photo player console, press the down key to close the console.
2. Press the **MENU** (⚙️) key to recall the “Photo setting” menu. Press **BACK** (⏪) to exit the current play and return to the status before play.

- **Photo Play Setting Menu**

When the **MENU** (⚙️) key is pressed to enter the “Photo setting” menu, press the up/down key to select various options repeatedly, press the OK key to enter the menu of the next level. Press the **BACK** (⏪) key to return to the menu of the previous level, and press the **EXIT** (⏻) key to directly close the play setting menu.

1. **Picture Mode:** Select the different picture mode.
2. **Sound Mode:** You can select sound mode to suit your personal preferences.
3. **Balance:** Adjust the sound balance of the speakers to preferred levels.

- **Photo Play Console**

When playing any file and there is no menu display, and then press the up key to enter the player console. Press the up/down key to select the control button repeatedly, and press the OK key to perform the functions of the selected key. To close the play console, please press the **BACK** (⏪) key.

1. **Stop:** Stop play the picture.
2. **Setting:** To enter the picture play setting menu.
3. **Info:** Picture information.
4. **Right rotate:** To rotate right for 90 degrees.
5. **Back Music:** Turn on or off the background music.
6. **Play Mode:** Select the different play mode.

- **Video Files**

When entering “Media”→“Video”, follow the above operation modes to start playing video files.

1. During the normal play process, press and hold the left / right key for rewind / fast forward play.
2. Press the up key to recall the video play console.
3. Press the **MENU** (⚙️) key to recall the play setting menu. Press the **BACK** (⏪) key to return to the status before video play.

- **Video Play Setting Menu**

Press the MENU (⚙️) key to enter the video play setting menu, press the up/down key to select various options repeatedly, and press the **OK** key to enter the menu of the next level. Press the BACK (⏪) key to return to the menu of the previous level, and press the EXIT (⏻) key to directly close the play setting menu.

1. Picture Mode: Select the different picture mode.
2. Sound Mode: You can select sound mode to suit your personal preferences.
3. Balance: Adjust the sound balance of the speakers to preferred levels.
4. Subtitle: Press the **OK** key to enter the menu of the next level to select subtitles and adjust subtitle properties;
5. Audio Track: If video files have multiple audio tracks, user could change tracks.
6. ScreenSize: Adjusts the Screen size.
7. HDR (High Dynamic Range): Generally used in video format, HDMI and the USB provides a greater dynamic range and greater image detail, also allows better recovery actual scene and visual effects.
8. SDR to HDR: Conversion between SDR to HDR.

- **Video Play Console**

When playing any file and there is no menu display, press the OK key to display the play console, press the up key to select the control button repeatedly, and press the OK key to perform the functions of the selected key. To close the play console, please press the BACK (⏪) key.

1. Stop: Stop play the video.
2. Setting: To enter the video play setting menu.
3. Info: Video file information.
4. Goto: Go to the set time.
5. Prev: To play the previous file in the same directory.
6. Next: To play the next file in the same directory.
7. Play Mode: Select the different play mode.

Applications

Press **SOURCE** (🏠) button on the remote to display the home main interface. Then use the arrow buttons to select the desired app and press **OK** button to view. Or press the hotkey on the remote control to enter the desired app directly.

- **Netflix**

Sign in to your Netflix® account to browse by genre, search for titles, manage your Instant Queue and review Netflix® recommendations all from you TV. If you do not have a Netflix® account, you will need to create a new account to use this feature. Watch TV show and movies online or by streaming them from Netflix. For more information, visit www.Netflix.com.

NOTE:

- The playback videos may be paused, stopped or buffer depending on your broadband speed. We recommend a minimum connection speed of 1.5 Mbps. For the best playback condition, a connection speed of 4.0 Mbps is required.
- These services are provided by separate Content Provider. Please visit the content providers web site for specific information on their services.

- **Screencast**




“Screencast” it is a mirror technology. You can make Smart TV display same pictures displayed on android device in the same wireless network.

- To start using screencast feature, go to home page and press **OK** on “screencast”.
- Turn on Wireless Display (a.k.a. Wi-Fi Display, Wi-Fi Direct or Cast Screen) function on your smart phone or tablet (Please refer to your device’s user manual for information on how to turn on wireless display).
- Your mobile device will display a list of available devices. Choose ‘TV name’ click on it to connect.
- Your mobile device will connect to the TV and will display the device screen on the TV.


NOTE: Your TV and Smartphone must be connected to the same wireless network with this application. Some Android devices may not support this function. (iOS devices are not supported).

Using the Teletext Feature

- **Display teletext**

1. Select a TV station with a teletext signal.
2. Press the  button to enter teletext mode.
3. Press the  button to enter Mix mode, this function enables you to superimpose the teletext page over the TV program.
4. Press the  button 2nd return or exit to the normal ATV/DTV mode.

- **Page selection**

1. Enter the page number (three digits) using the number buttons. If you press a wrong number during input, you must complete the three digit number and then re-enter the correct page number.
2. The  button can be used to select the preceding or following page.

- **Hold**




You can press the  button to hold a page, and press it again to release the page.

- **Index**



Press the  button to enter the main index page directly.

- **Enlarging Text**

When a page is displayed, you can double the size of the text to make it easier to read.


1. Press the  button to enlarge the top half of the page.
2. Press the  button again to enlarge the bottom half of the page.
3. Press the  button once more to return to the normal display.

- **Reveal mode**

You can display concealed teletext information (e.g. Answer to puzzles or riddles etc.) by pressing  button. Press  button again to remove the information from the display.

- **Subpage**

Some teletext may contain several subpages which are automatically paged in a certain cycle by the TV station.

1. You can enter into a certain subpage by pressing the  button directly and select the page number with number buttons. Enter the sub page number (e.g. 0003) for the third sub page.
2. Press the button again to exit the subpage mode.
3. Press the button to return to the normal TV mode.

- **Color buttons (Red, Green, Yellow and Blue)**

Press these buttons to access directly to the corresponding color pages displayed at the lower part of the teletext screen.

Before contacting the service technician, perform the following simple checks. If any program still persists, unplug the TV and call for service.

PROBLEM	POSSIBLE SOLUTION
No sound and picture	<ul style="list-style-type: none"> • Check whether the main plug has been connected to a wall let. • Check whether you have pressed the POWER button on the front of TV set. • Check the picture contrast and brightness settings.
Normal picture but no sound	<ul style="list-style-type: none"> • Check the volume. • Sound muted? Press the MUTE button. • Try another channel, the problem may be with the broadcast. • Are the audio cables installed properly?
The remote control does not work	<ul style="list-style-type: none"> • Check to see if there is any object between the product and remote control Causing obstruction. • Are batteries installed with correct polarity (+ to +, - to -)? • Correct remote operating mode set: TV, VCR etc.? • Install new batteries.
Power is suddenly turned off	<ul style="list-style-type: none"> • Is the sleep timer set? • Check the power control settings. Power interrupted. • No broadcast on station tuned with auto activated.
Picture appears slowly after switching on	<ul style="list-style-type: none"> • This is normal. The image is muted during the product startup process. Please contact your service center, if the picture has not appeared after five minutes.
No or poor color or poor picture	<ul style="list-style-type: none"> • Adjust the color in menu option. • Keep a sufficient distance between the product and the VCR. • Try another channel, the problem may be with the broadcast. • Are the VIDEO cables installed properly? • Activate any function to restore the brightness of the picture.
Horizontal/vertical bars or picture shaking	<ul style="list-style-type: none"> • Check for local interference such as an electrical appliance or power tool.
The TV is not receiving all channels.	<ul style="list-style-type: none"> • Confirm that the coaxial cable is securely connected to the TV. • If you are using an antenna, verify it is positioned correctly and all the connections are secure.
Poor reception on some channels	<ul style="list-style-type: none"> • Station or cable product experiencing problems. Tune to another station. • Station signal is weak, reorient antenna to receive weaker station. • Check for sources of possible interference.
No output from one of the speakers	<ul style="list-style-type: none"> • Adjust balance in menu option.
The TV audio is not being played through the receiver.	<ul style="list-style-type: none"> • Connect an optical cable to the TV and the receiver. • ARC enables digital sound to be outputted via the HDMI (ARC) port. However, ARC is only available when the TV is connected to an audio receiver that supports ARC.
The wireless network connection failed.	<ul style="list-style-type: none"> • Make sure the Network Connection is set to Wireless. • Make sure the TV is connected to a wireless IP router.
The software update over the Internet has failed.	<ul style="list-style-type: none"> • Check the network connection status. • If the TV is not connected to a network, connect to a network. • The upgrade stops if you already have the latest software version.
No picture when connecting HDMI	<ul style="list-style-type: none"> • If an HDMI cable doesn't support High Speed HDMI, it can cause flickers or no screen display. In this case use the latest cables that support High Speed HDMI.

Maintenance

Early malfunctions can be prevented. Careful and regular cleaning can extend the amount of time you will have your new TV. Be sure to turn the power off and unplug the power cord before you begin any cleaning.

Cleaning the screen:

1. Here's a great way to keep the dust off your screen for a while. Wet a soft cloth in a mixture of lukewarm water and a little fabric softener or dish washing detergent. Wring the cloth until it's almost dry, and then used it to wipe the screen.
2. Make sure the excess water is off the screen, and then let it air-dry before you turn on your TV.
Cleaning the cabinet To remove dirt or dust, wipe the cabinet with a soft, dry, lint-free cloth. Please be sure not to use a wet cloth.

Extended Absence

If you expect to leave your TV dormant for a long time (such as a vacation), it's a good idea to unplug the power cord to protect against possible damage from lightning or power surges.

Disposal of old electrical appliances

The European directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in the normal unsorted municipal waste stream. Old appliances must be collected separately in order to optimize the recovery and recycling of the materials they contain, and reduce the impact on human health and the environment.

The crossed out "wheeled bin" symbol on the product reminds you of your obligation, that when you dispose of the appliance, it must be separately collected. Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance.

Note: For wall mount, installation and further assistance, please call on our customer care number - 1860 500 3555.

DISPOSAL OF OLD ELECTRICAL APPLIANCES



According to Waste Electrical & Electronics Equipments' (WEEE) directive, WEEE should be separately collected and treated. If at any time in future you need to dispose of this product, please DO NOT dispose of this product with other household waste. Please send this product to WEEE collecting points where available.

The following marking/symbol on the product or carton indicates that the product and its accessories/parts should not be disposed of with other household waste at the end of working life. Please separate these items from other types of waste and recycle them responsibly for the conservation of the environment and collective well-being.

For more information on this subject, please log on to <http://www.sansuiworld.com/e-waste> or call us on 1860 500 3555.

REACH US AT

Jaina India Pvt Limited, D-170, Okhla Industrial Area, Phase-I, New Delhi-110020

Customer Care: 1860 500 3555 | Website: www.sansuiworld.com